




Maintenance instructions

Railcar Trailer hitch

80800

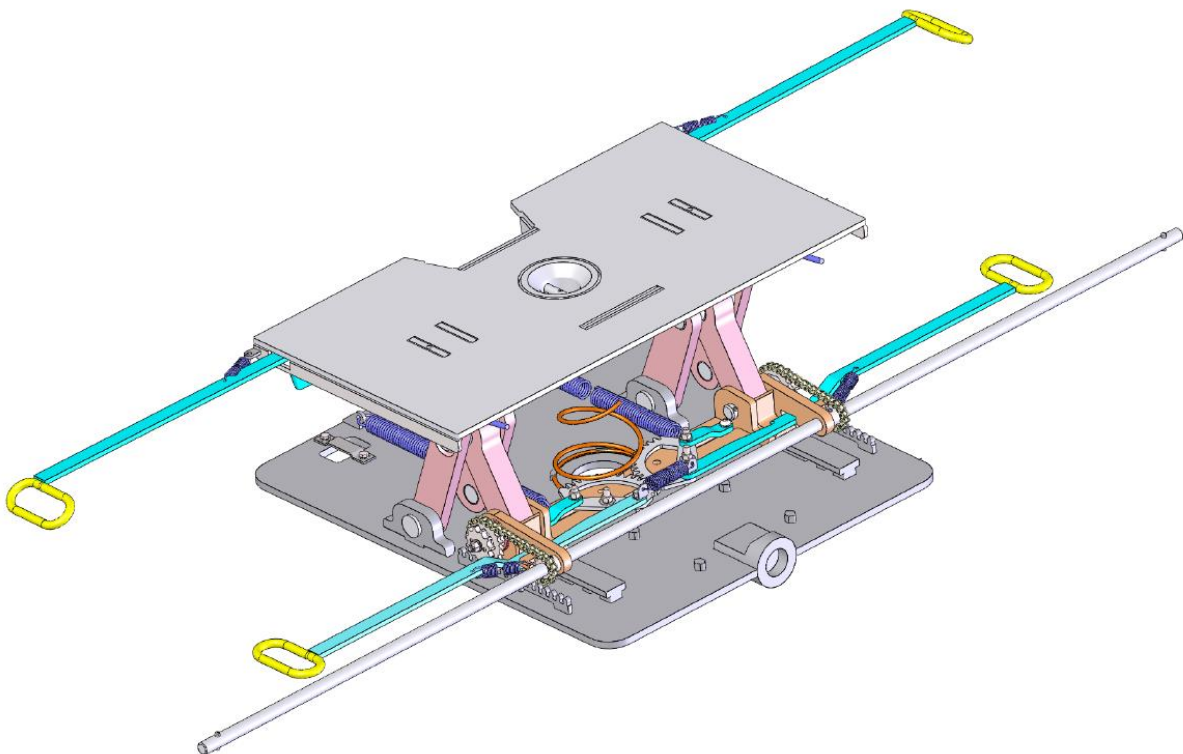



General note

Regular maintenance of the hitch should normally be undertaken every six months, where in the frequency of maintenance is dependent on the frequency of use.

Lubrication note:

1. Make sure that all moving parts (e.g. the lock, the mounting base, the handel, the chain wheel, etc.) are always sufficiently lubricated or oiled.
2. The mounting base must be cleaned.

Information regarding suitable lubricants and the areas to be lubricated can be found in the lubrication schedule for Railcar Trailer Hitch 80800.

CAUTION: DO NOT APPLY BUFFER GREASE !!!

Inspection note:

1. Inspect the hitch plate and the height-adjustable base unit. Replace missing or damaged screws or nuts where necessary.
2. Inspect the hitch plate lock for signs of damage or excessive corrosion. If necessary, replace the lock.
3. Inspect the release handles for signs of damage. Make sure that the Release handles are not bent or out of shape and function properly.
4. Inspect the release handle spring. Missing or damaged springs must be replaced.
5. Inspect the height adjustment locking bolts. Bent or damaged bolts must be replaced.

CAUTION:

A Railcar Trailer Hitch WITH DAMAGED / BENT / MISSING COMPONENTS IS NOT READY FOR OPERATION!